

Bike Tow Hitch Assembly Instructions

Warning: Tow hitch installation requires removal and replacement of the bike axel or skewer. Only individuals familiar with safe installation of the axel or skewer should perform this task.



1 Axel / Skewer Removal

With bike properly supported, remove the thru axel or skewer.




2 Tow Hitch Installation

Align tow hitch on left side of frame as shown and feed axel or skewer through hitch and wheel.



3 Secure Axel

Replace and tighten axel per your bike's operators' manual.

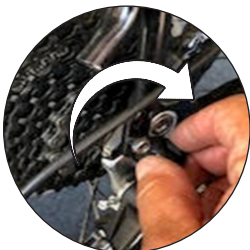


4 Attach Tow Bar

Locate the tow bar mounting holes on the front of the Rex unit. While depressing both rod locking knobs, insert the rods into the mounting holes. Release knobs to lock rods and test the connection.



5 Connect Tow Bar to Hitch

Slide ball joint of tow bar over the connection pin on the hitch. Secure connection with the safety pin. Test the connection.

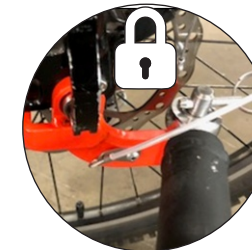

To adjust the ball joint to level, loosen ball joint nut. Tighten nut once level.